

Configuration de base Junos Switch	Description
load factory-default	Reseter la config
set system root-authentication plain-text-password <enter> "mot de passe"	Configuration d'un mot de passe root
set system service ssh	activer service ssh
set system services netconf ssh	activer service NETCONF SSH pour NSM
set system service web-management http	activer service web
set system host-name " nom Switch"	mettre nom « Host » sur le commutateur
set system login user "admin" class super-user authentication plain-test-password	Configuration d'un compte administrateur
set snmp community public authorization read <enter>	si on veut activer snmp en mode lecture pour la communauté public
set interfaces vme unit 0 family inet address 10.90.90.90/24	activer l'interface management Ex4200
set routing-options static route 0.0.0.0/. Next-hop "Ip de passerelle"	configuration d'une route par défaut